

## **EJOT Duro PT<sup>®</sup> S 6.0 x L** Bracket secret fix for High Pressure Laminates



**EJOT PT<sup>®</sup> Stop drill bits**  
Dedicated drill bits to accurately drill stopped holes to the required depth and hole diameter in the high pressure laminate boards to receive the EJOT PTS fasteners to securely install hanging brackets

### Application Guide.

**8mm thick board**

**PT<sup>®</sup> S 60 x 9.5 (SAP 4510116330)**

**5.5mm deep hole PTS 4.9 x 5.5 stop drill**

**10mm thick board**


**PT<sup>®</sup> S 60 x 11.5 (SAP 4510117330)**

**7.5mm deep hole PTS 4.9 x 7.5 stop drill**

**13mm thick board**

**PT<sup>®</sup> S 60 x 14.5 (SAP 4510118330)**

**10.5mm deep hole PTS 4.9 x 10.5 stop drill**

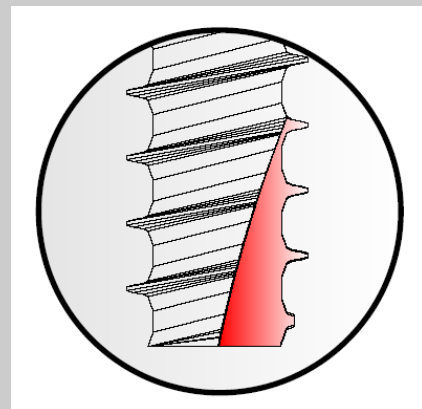

**Torx 30 Drive**